
DUAL HEATED HAT PRESS INSTRUCTION MANUAL SEMI AUTO OPEN

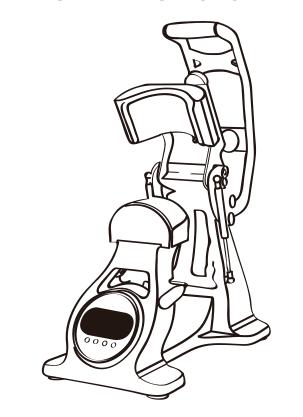

INTRODUCTION

The Semi-auto Hat Press is designed to solve your major cap transfer problems. The updates bring following features. Molded cap platen reduce the creases during the transfer process effectively. One-size-fits-all platen ensures transition between cap sizes in one platen. Independently controlled upper and lower heated platens optimize the transfer effects. Heated lower platen makes it easy for patches and emblems. One-hand operation for easy printing, wide opening offers a heat-free workspace, opens automatically which reducing risk of over-application, multi-timer brings heat transfer more flexible and ensures a better result.

READ BEFORERead this manual carefully to ensure you use the press correctly. After readingOPERATINGand familiarizing yourself with the equipment, store the manual in a safe placeMACHINERYfor future references.

SAFETY PRECAUTIONS

The following precautions are provided to prevent harm or injury to yourself and others. Please make sure to thoroughly read, understand, and follow these precautions before using the product.

WARNING: Follow the warnings below. Otherwise, death or serious injuries may occur.

- Use this product only as described in this manual.
- Unplug the heat press from the electrical outlet and let it cool down COMPLETE-LY before cleaning, performing maintenance, or repair.
 - DO NOT operate the product after the appliance malfunctions or is dropped or damaged in any way.
 - DO NOT operate the press if the plates are dirty. Clean the plates with isopropyl alcohol and wipe them dry with a clean cloth. Ensure both plates are completely dry before use.
 - DO NOT immerse the press, its power cord, and plugs in water or any other liquid.DO NOT operate the product with a damaged cord or plug.
 - DO NOT handle a power plug or other components of the press with wet hands.
 - DO NOT connect too many power plugs to the same power outlet.
 - DO NOT disassemble the press or make any to the equipment.





PAGE 2

UNPACKING

UNPACKING


PRECAUTIONS

	strangulation, and other injuries. Preserve the shipping carton. DO NOT discard or disassemble the shipping box. It is designed to hold the weight of the product and should be used in case you need to return the equipment for repair or warranty maintenance in the future.
UNPACKING INSTRUCTIONS	 Place the box on a large, sturdy, flat surface. Open the box and remove the instruction manual and all parts that camew-
	ith the press. 3. Remove the packaging material and carefully lift the press out of the box.
	4. Remove any protective or promotional labels from the press and otherparts if applicable.
	5. Examine the heat press after unpacking for any damage. If found one, takea picture and contact us immediately.
ITEM CHECKLIST	Before starting, please make sure that the following items are included with your press machine. If anything is missing, contact us, please.
	1. Dual Heated Hat Press
	2. AC Power Cord
	3. Instruction Manual
RECOMMENDED PARTS	The following items are recommended to use with this machine:
	1. Teflon Sheet
	2. Silicone Mat
	3. Please contact us if you don't have above things.

WARNING: Keep the packaging materials (cardboard, foam, plastic bags,

etc.) out of the reach of children to prevent accidental choking, suffocation,

GETTING FAMILIAR

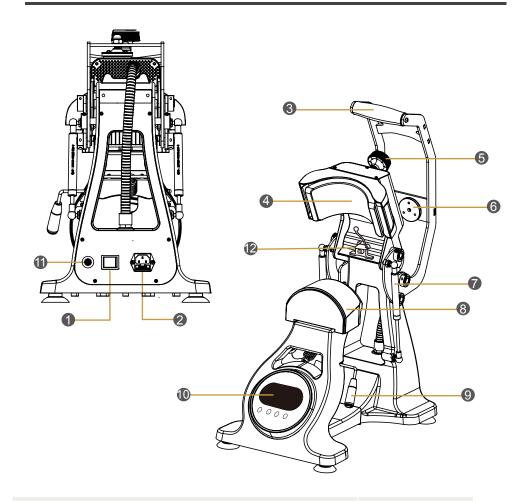

CP28	CP2815–3 Pro Version		
Power Switch	Pressure Knob	Assitant Knob	1 Laser Switch
2 Power Plug	6 Magnetic Device	Controller Display	Laser
3 Handle Grip	Air Shock		
4 Top Heat Plate	8 Bottom Heat Plate		

PAGE 4

OPERATING INSTRUCTIONS


PREPARING 1. Prepare materials you wish to press. PRESS

OPERATING INSTRUCTIONS (continued)

PREPARING
PRESS
(continued)
2. Make sure the press stands on a flat sturdy countertop.
3. Insert the AC cord that came with the product into the press AC power cord socket 2 and then plug its other end into an electrical outlet (110V/220V).

STARTING Flip the ON/OFF switch 1 to turn the press on. The control panel 1 lights up.

- SETTING CONTROL PANFI
- 1. Press Set 🚯 button on the control panel (Fig. 1) to go to the temperature setting mode for the top heat platen.
- 2. Press Up (a) or Down (b) buttons to select the desired temperature (Fig. 2). The selected temperature is flashing on the display.
- 3. Press Set 🚯 button on the control panel (Fig. 3) to go to the temperature setting mode for the bottom heat platen.
- Press Up (a) or Down (b) buttons to select the desired temperature (Fig. 4). The selected temperature is flashing on the display.

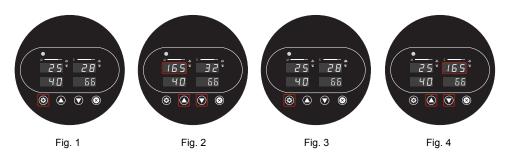

PANEL


OPERATING INSTRUCTIONS (continued)

- SETTING
 5. Press Set ⁽⊕) button again (Fig. 5) to go into the timer setting mode.
 CONTROL
 6. Press Up (▲) or Down (♥) buttons to select the desired time in second
 - 6. Press Up (a) or Down (b) buttons to select the desired time in seconds (Fig. 6).
- (continued) 7. Press Set Tip: Depen

 Press Set (2) button to go to the temperature scale selection mode (Fig. 7). Tip: Depending on your machine's default settings, you may either see "F" or "C" on the display indicating the currently selected temperature scale (°F or °C).



- Press Up ▲ or Down ▼ buttons to select either °F or °C (Fig. 8) OR skip this step if you are satisfied with the current selection.
- Press Set (b) button once more (Fig.9) to record all control panel settings. The platens start heating, and the heating icons are now displayed on the screen (Fig. 10).

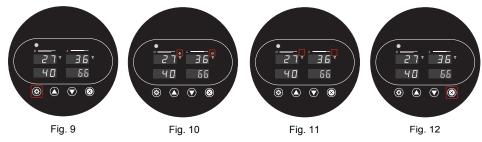

PRESSING 1. Wait until the platens reach the desired temperature(s) and the heating icons are turned off (Fig. 11).

- 2. Place the prepared material in the center of the bottom platen 4.
- 3. Push Down 3 handle grip to lower the top platen 8 and start pressing.

OPERATING INSTRUCTIONS (continued)

PAGE 6

PAGE 7

TECHNICAL SPECIFICATIONS

PRESSING (continued)	 Short Press the button automatically, function like Wait until the countdown en will open automatically. Remove the pressed mater exercising extreme caution 	a quick release button. nds and the press starts b rial using heat resistant glo	eeping. And the machine
TURNING OFF PRESS	 Turn off the machine by flip Unplug and then disconned Wait until the platens cool of 	t the AC power cord from	the press.
CLEANING PRESS PLATES	 Make sure the press plates Apply a small amount of all until clean. Use rubbing alc isopropyl alcohol. Wipe plates with a dry clea Repeat these steps for clear 	cohol to a clean cloth and ohol that contains at least n cloth.	wipe down the plates
MULTI TIMER ACTIVATION SETTING	 Long press (*) set button or and the machine will enter in button twice until it shown lik Press the up (*) and (*) dow including 1,2 and 3, and the per the timer you set (Fig.15 After selected, then give a lo it will record settings and back 	to the internal setting . Th e this. (Fig.14). /n buttons to select the tim control panel will also sho). ng press about 8 seconds	en Press 🕲 the set ner you need, w the light quantity as s to the 🐼 set button,
● ● ● ●			●
Fig. 13	Fig. 14	Fig. 15	Fig.16

Tips: If you want to adjust the timers just repeat the above settings.

Model	CP2815-3	
Voltage	110V/220V	
Heat Plate	9.5 x 18cm	
Power	600W	
Controller	LCD Controller	
Max. Temperature	210 °C/ 410 °F	
Temp. Accuracy	±4 °F / 2 °C	
Max. Pressing Force	250kg	
Working Style	Lever Mechanism & Magnetic	
Stand-by Feature	Max. 120 mins	
Accept Thickness	≤1cm	
Dimensions (L x W x H)	73 x 57.0 x 30.5cm	
Packaging (L x W x H)	60.5 x 58.5 x 40.5cm	
Product Weight	23kg	
Shipping Weight	33kg	
Certificate	CE,UKCA	